



PHIRE-S™ Single Fiber Series

KEY FEATURES

- ❖ Single fiber bi-directional data transmission
- ❖ Optional SC or LC optical connector
- ❖ Fully supports base Camera Link™ cameras/frame grabbers
- ❖ Direct plug – no electrical cable needed
- ❖ Broad bandwidth – up to 2.5 Gb/s supporting 24 bits image data at 85 MHz pixel clock
- ❖ Transparent operation – plug and play with no changes required for camera and/or frame grabber
- ❖ Single 5V~24V DC power supply
- ❖ Exchangeable optical module – easy to upgrade
- ❖ Estimated transmission distance - up to 500 m for 50/125 µm MM fiber and 10 km for SM fiber
- ❖ **PoCL compatible**
- ❖ **Compact size – 59L x 39.4W x 17H mm (2.326L x 1.551W x 0.669H inch)**

TARGET APPLICATIONS

- ❖ Solar panel or glass panel inspection
- ❖ Semiconductor wafer inspection
- ❖ High speed printing inspection
- ❖ High precision surface inspection (e.g. airplane surface or automobile painting)
- ❖ Automated product inspection (e.g. food, drinking or pharmaceutical products)
- ❖ High resolution and real-time analysis for science, sports, automobile tests, and 3-D animation.
- ❖ High precision security surveillance (e.g. border control, airport)
- ❖ Traffic surveillance/control and vehicle license plate reading/recording (e.g. toll booth)
- ❖ Cameras placed in harsh environment (e.g. nuclear plant, steel mill or undersea monitoring)
- ❖ Other Machine Vision Applications

PHIRE-S™ Camera Link Single Fiber Adapter

Base Configuration

PHS-68-M50/S10
PHS-85-M50/S10
PHS-85-M25/S07
PHL-68-M50/S10
PHL-85-M50/S10
PHL-85-M25/S07



D-A-CH

Laser 2000 GmbH
82234 Wessling
Tel. +49 8153 405-0
info@laser2000.de
www.laser2000.de

FRANCE – Telecom

Laser 2000 SAS
78860 St-N. I. Bretèche
Tel. +33 1 30 80 00 60
info@laser2000.fr
www.laser2000.fr

FRANCE – Photonic

Laser 2000 SAS
33600 Pessac
Tel. +33 5 57 10 92 80
info@laser2000.fr
www.laser2000.fr


IBERIA

Laser 2000 SAS
28034 Madrid
Tel. +34 650 529 806
info@laser2000.es
www.laser2000.es

NORDICS

Laser 2000 GmbH
112 51 Stockholm
Tel. +46 8 555 36 235
info@laser2000.se
www.laser2000.se

TYPICAL SET UP DIAGRAM

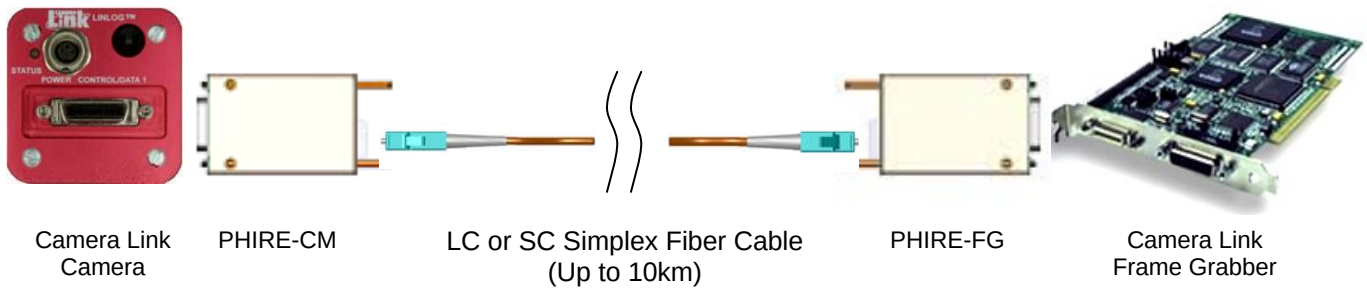

TECHNICAL SPECIFICATIONS

General Specification

Operating Temperature	Ambient	0 ~ 50 °C
	Case	0 ~ 60 °C
Storage Temperature		-40 ~ 85 °C
Operating Humidity		20 ~ 80% (non-condensing)
Input Voltage		DC 5 ~ 24 V
Supply Current @25 °C		0.160 A @12V each module
Typical Power Consumption		1.9 W each module
Connector Type		Micro USB type B with custom pin assignment
Approx. Weight (each module)		75 gram

Camera Link Interface (x = S for SC simplex or L for LC simplex)

	PHx-68-M50 PHx-68-S10	PHx-85-M50 PHx-85-S10	PHx-85-M25 PHx-85-S07
Max Pixel Clock	68 MHz	85 MHz	85 MHz
Max Image Data Width	24 bits	16 bits	24 bits
Transport Bandwidth	2 Gb/s	2 Gb/s	2.5 Gb/s
Connector Type	MDR26 plug		

Optical Interface (x = S for SC simplex or L for LC simplex)

	PHx-68-M50 PHx-85-M50	PHx-85-M25	PHx-68-S10 PHx-85-S10	PHx-85-S07
Operating Wavelength	1310nm (CM) 1550nm (FG)	1310nm (CM) 1550nm (FG)	1310nm (CM) 1550nm (FG)	1310nm (CM) 1490nm (FG)
Min Optical Tx Output Power	-3 ~ -9 dBm	-3 ~ -9 dBm	-3 ~ -10 dBm	-3 ~ -8 dBm
Min Optical Rx Power	-15 dBm	-15 dBm	-18 dBm	-18 dBm
Connector Type	SC or LC simplex			
Fiber Type	50/125 μm or 62.5/125 μm MM fibers		9/125 μm SM fibers	

D-A-CH

Laser 2000 GmbH
82234 Wessling
Tel. +49 8153 405-0
info@laser2000.de
www.laser2000.de

FRANCE – Telecom

Laser 2000 SAS
78860 St-N. I. Bretèche
Tel. +33 1 30 80 00 60
info@laser2000.fr
www.laser2000.fr

FRANCE – Photonic

Laser 2000 SAS
33600 Pessac
Tel. +33 5 57 10 92 80
info@laser2000.fr
www.laser2000.fr


IBERIA

Laser 2000 SAS
28034 Madrid
Tel. +34 650 529 806
info@laser2000.es
www.laser2000.es

NORDICS

Laser 2000 GmbH
112 51 Stockholm
Tel. +46 8 555 36 235
info@laser2000.se
www.laser2000.se

MECHANICAL INFORMATION (mm [inch])

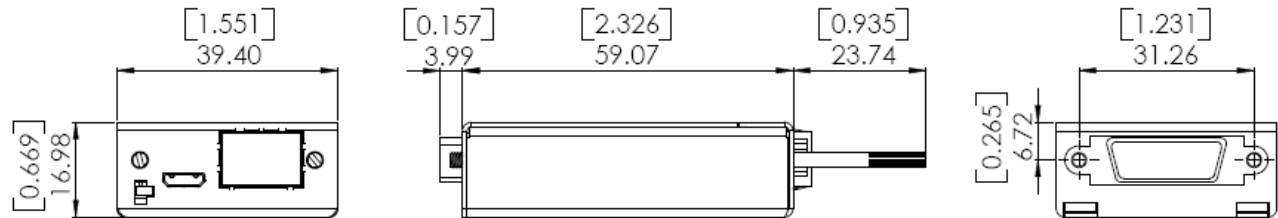

ORDERING INFORMATION

System models

Model #	Data Width	Max Pixel Clock Rate	Transport Distance*	Connector	Items Provided
PHS-68-M50	24 bit	68 MHz	500 m	SC	1x PHIRE-CM (transmitter) 1x PHIRE-FG (receiver) 2x 12V DC output international wall mount AC/DC power adapters with snap locking plug (Fiber cable not included)
PHS-68-S10	24 bit	68 MHz	10 km	SC	
PHS-85-M50	16 bit	85 MHz	500 m	SC	
PHS-85-S10	16 bit	85 MHz	10 km	SC	
PHS-85-M25	24 bit	85 MHz	250 m	SC	
PHS-85-S07	24 bit	85 MHz	7 km	SC	
PHL-68-M50	24 bit	68 MHz	500 m	LC	
PHL-68-S10	24 bit	68 MHz	10 km	LC	
PHL-85-M50	16 bit	85 MHz	500 m	LC	
PHL-85-S10	16 bit	85 MHz	10 km	LC	
PHL-85-M25	24 bit	85 MHz	250 m	LC	
PHL-85-S07	24 bit	85 MHz	7 km	LC	

* Distance depending on fiber type and system design. Transmission distance above is estimated minimum distance for 50/125 OM2 MM fiber and 9/125 SM fiber. Extra optical losses in the system will reduce the transmission distance.

Accessory

Part #	Description
618-TR12-MUSB-1	12V DC international wall mount AC/DC adapter with micro-USB plug
LC-LC-MS-xxM2	LC to LC simplex 50/125 µm OM2 MM fiber. xx = desired length in meters.
LC-LC-MS-xxM3	LC to LC simplex 50/125 µm OM3 MM fiber. xx = desired length in meters.